



**Refillable EKO  
capsules.sk for Dolce  
Gusto ®type coffee  
machines**

Instructions for use

## How to use the EKO capsule?

1. Fill the capsule with coffee to the top and gently press with a spoon.
2. Clean the capsule from excess coffee and close the lid.
3. Insert the capsule into the coffee machine so that the needle fits into the pre-designed hole.
4. Proceed as if it were an original capsule.
5. Done. Enjoy the coffee as you like it and save money :-)

## Tips for extending the lifespan of the product

- Make sure the needle is positioned correctly and do not pierce the capsule elsewhere.
- Always position the capsule so that the tab at the bottom fits into the exact space in the holder.

## Method of use

- For correct use, it is necessary to follow exactly the instructions. Improper use of the product may result in damage to the coffee machine, leakage of hot water and coffee out of the coffee machine! The seller is not liable for damage caused by improper use of the product.
- The product is intended for use in Dolce Gusto® machines only. This is not an original Nestlé product. Dolce Gusto® is a registered trademark of Nestlé.
- Do not expose the product to cold, dust or fire. The product is not intended for use in a dishwasher.
- After each use, the product should be disassembled and rinsed in water thoroughly. Do not remove the capsule until it has cooled down. You could get burned.
- One capsule is suitable to be used 50 times. The product can be used until the rubber seal in the cap has become deteriorated or the water leaks through the lid. Once this happens, do not use the product anymore, choose a new product.

## Used materials

- capsule: food polypropylene (BPA-free),
- strainer: 304 stainless steel,
- seal: synthetic rubber.

## Warranty and how to use the product

Products are covered by the standard statutory warranty period. This warranty is non-transferable and financial compensation in cash is not possible. The warranty does not apply to products that have been used in a manner other than that specified in these instructions for use.

The warranty also does not cover:

- Damage resulting from improper use, neglect of care, or any other use for purposes not listed in this manual.
- Damage to appearance, damage caused by corrosion or gradual wear and tear.

Any intervention or repair by unauthorized persons results in the voiding of the product warranty.

**Seller and importer:** NajTrade s.r.o., Húskova 31, 04023 Košice, IČO: 50590502.

