



# **Refillable EKO capsule for Tassimo® type coffee machines**

Instructions for use

## Dosing

60 ml version: 9.5 g finely ground coffee

180 ml version: 9.1 g coarsely ground coffee, instant beverage, or tea

## How to use the capsule?

1. Fill the capsule (see dosage) with the required beverage up to the MAX level.
2. Remove excess beverage from the capsule cap.
3. Close the lid, put the capsule in the coffee machine and use it as if it were a disposable capsule.  
Slight resistance may be present when closing the coffee machine.

## If the capsule overflows / explodes, make sure that:

- You do not use more coffee than intended (see dosage)
- Coffee is not ground too finely (to dust)
- The coffee is not pushed too hard into the capsule

The dosage may not be accurate for the type of coffee you are using. We recommend starting with a smaller dose of coffee and gradually adding coffee until you reach the correct setting, which does not lead to overflowing the capsule.

## Method of use

For correct use, it is necessary to follow exactly the instructions. Improper use of the product may result in damage to the coffee machine, leakage of hot water and coffee out of the coffee machine! The seller is not liable for damage caused by improper use of the product.

The product is intended for use in Tassimo ® machines only. This is not an original Kraft Foods product. Tassimo ® is a registered trademark of Kraft Foods.

Do not expose the product to cold, dust or fire. The product is not intended for use in a dishwasher.

After each use, the product should be disassembled and rinsed in water thoroughly. Do not remove the capsule until it has cooled down. You could get burned.

## Used materials

- capsule: food polypropylene (BPA-free),
- strainer: 304 stainless steel,

## Warranty and how to use the product

Products are covered by the standard statutory warranty period. This warranty is non-transferable and financial compensation in cash is not possible. The warranty does not apply to products that have been used in a manner other than that specified in these instructions for use.

The warranty also does not cover:

- Damage resulting from improper use, neglect of care, or any other use for purposes not listed in this manual.
- Damage to appearance, damage caused by corrosion or gradual wear and tear.

Any intervention or repair by unauthorized persons results in the voiding of the product warranty.

**Seller and importer:** NajTrade s.r.o., Húskova 31, 04023 Košice, IČO: 50590502.

